


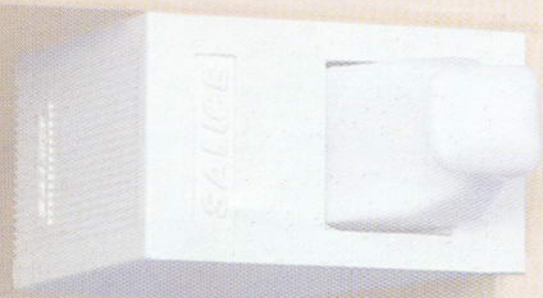

PUSH




SALICE

F U R N I T U R E H I N G E S

SALICE

FORATURA ANTA PER MONTAGGIO **Push**
DOOR DRILLING FOR **Push** ASSEMBLY
BOHRUNG DER TÜR FÜR **Push** MONTAGE
PERÇAGE DE LA PORTE POUR MONTAGE **Push**
TALADRO DE LA PUERTA PARA MONTAJE **Push**

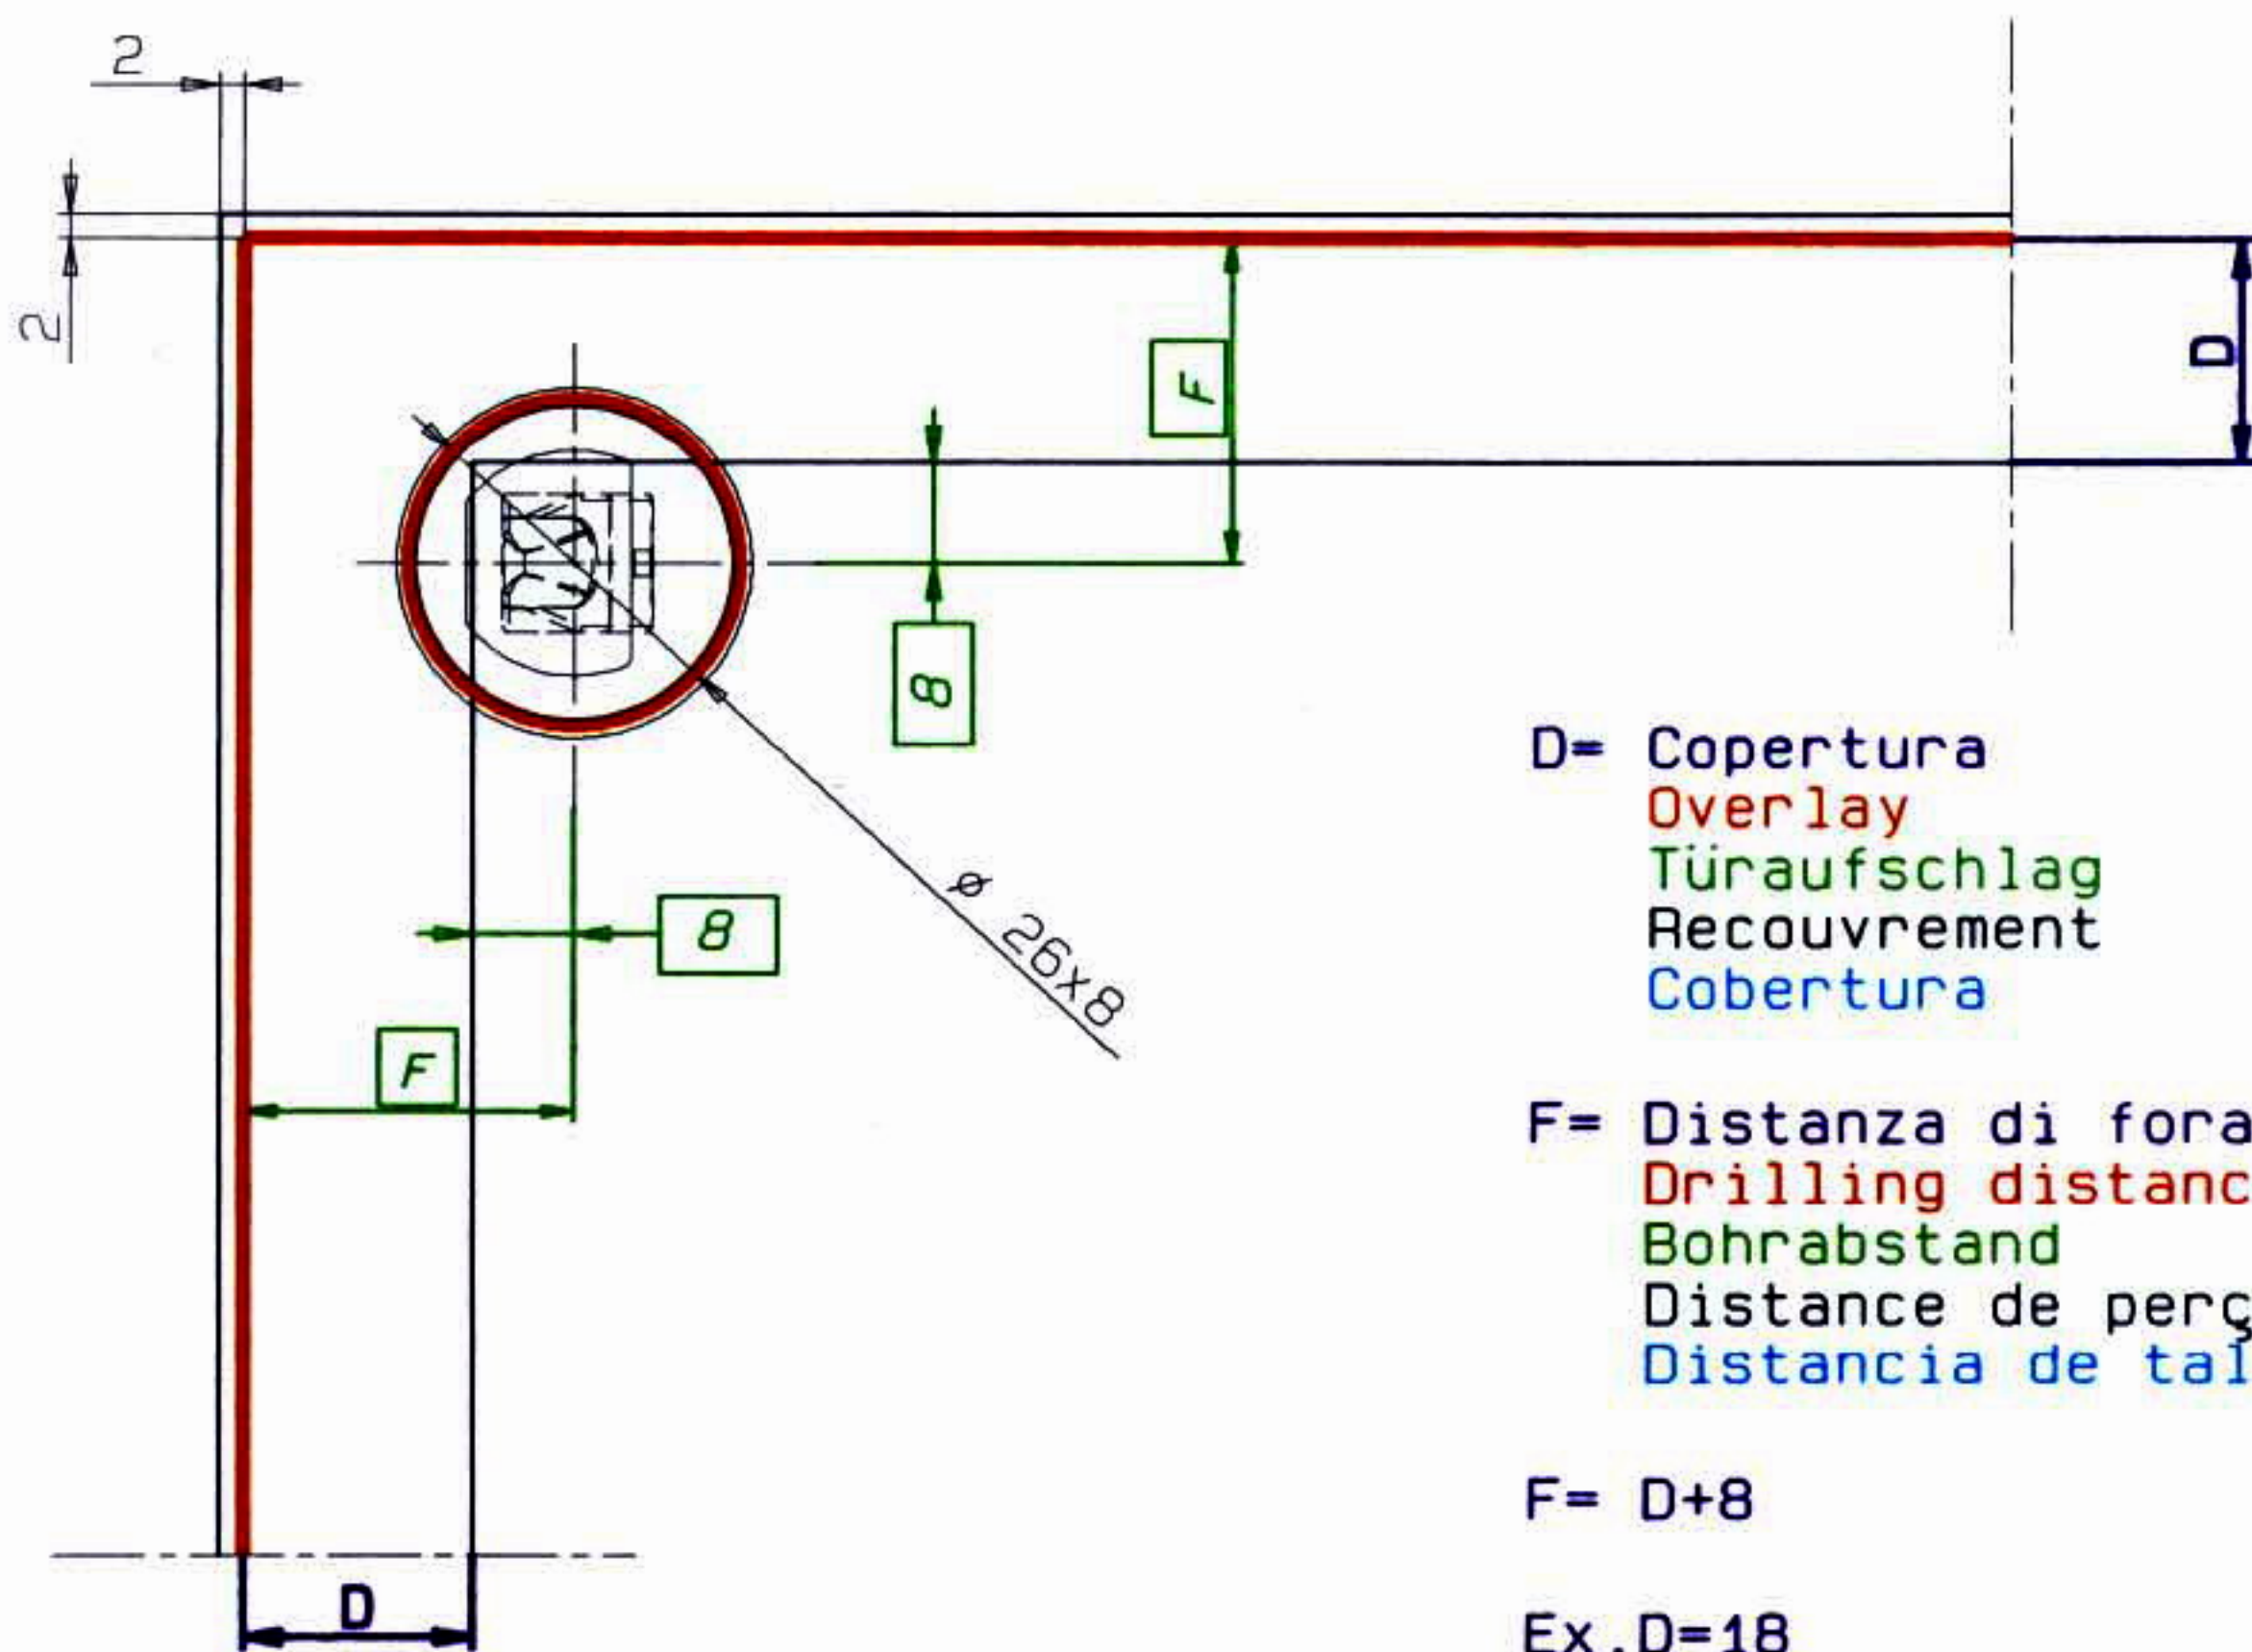

D= Copertura
Overlay
Türaufschlag
Recouvrement
Cobertura

F= Distanza di foratura
Drilling distance
Bohrabstand
Distance de perçage
Distancia de taladro

$$F = D + 8$$

Ex. D=18
F=18+8=26

