



DPMB289

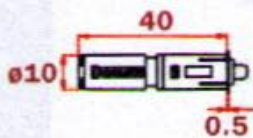


Release device.



Retaining catch to be inserted.

DPMB2891


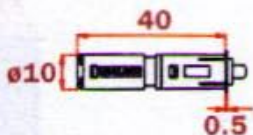


Release device.



Retaining catch with adhesive.


DP80SNB

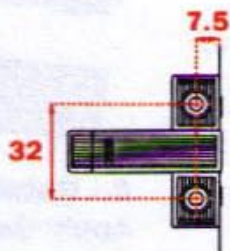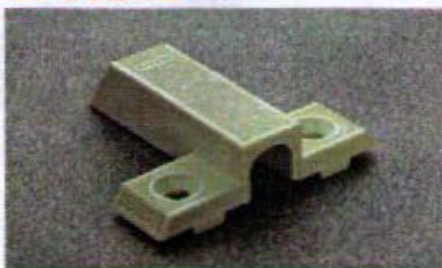

Plastic adapter for release device.
To be fixed with woodscrews.
7.5x32 mm drilling.
With assembly stop devices.

DP81SNB = To be fixed with euroscrews.

DP80SNBR

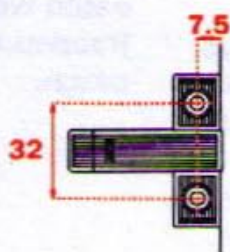


Plastic adapter for release device.
To be fixed with woodscrews.
7.5x32 mm drilling.
Without assembly stop devices.

DP81SNBR = To be fixed with euroscrews.

Release device application.


Release device application with adapter with assembly stop devices.

Insert the release device frontally into the dapter. Place the adapter to the top, the side or the base panel of the cabinet, using the assembly stop devices for final positioning.

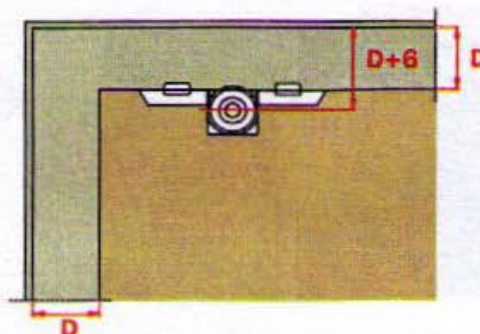


Release device application with adapter without assembly stop devices.

Insert the release device frontally into the dapter. Place the adapter to the top, the side or the base panel of the cabinet, using the drilling value 7.5 x 32 mm for final positioning.

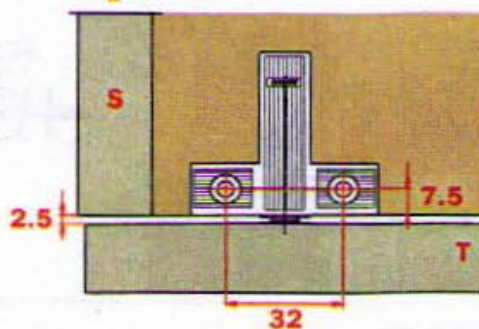

Application of the release device to be recessed.

Drill a hole \varnothing 10 mm and min. 40 mm depth in the top, the side or the base panel of the cabinet. Insert the release device into the hole.

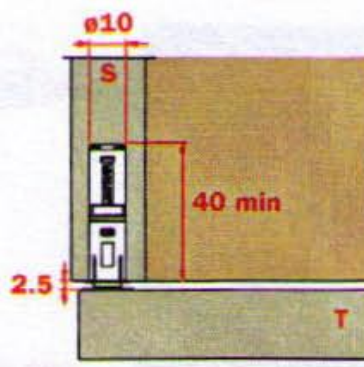

Retaining catch application.


1 - Retaining catch with adhesive.

Apply the retaining catch to the magnetic release device.

Remove the protective strip from the adhesive.

Close the door. In this way the retaining catch is positioned on the door.

Reopen the door and apply a firm pressure to the retaining catch to ensure a correct installation.

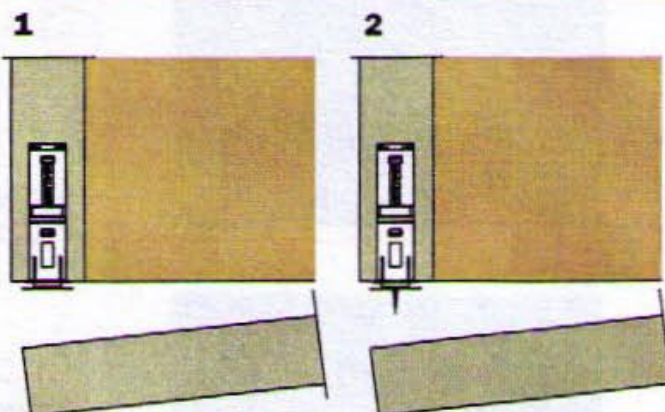

Attention:

For a correct application and to ensure optimal endurance, we suggest these guidelines are followed:

- 1 - clean and de-grease the door surface where the retaining catch is to be installed;
- 2 - remove the protective strip from the adhesive;
- 3 - place the retaining catch in position, in a place that is at room temperature $\geq 10^\circ$ and apply a firm pressure for 10-15 seconds.

After few seconds from the installation the retaining catch is suitable for the use. After 24h the max. hold is attained.

2 - Retaining catch to be inserted.

Apply the retaining catch to the magnetic release device.

Close the door. The point of the retaining catch will show where to insert it.

Reopen the door and press the retaining catch.